



# MC67 WITH ANDROID™ OS QUICK START GUIDE

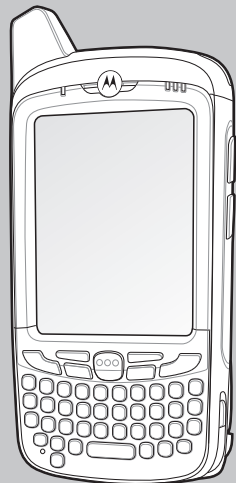


## FEATURES

**Note:** Remove protective shipping film that covers the touch screen, exit window and camera window before using.

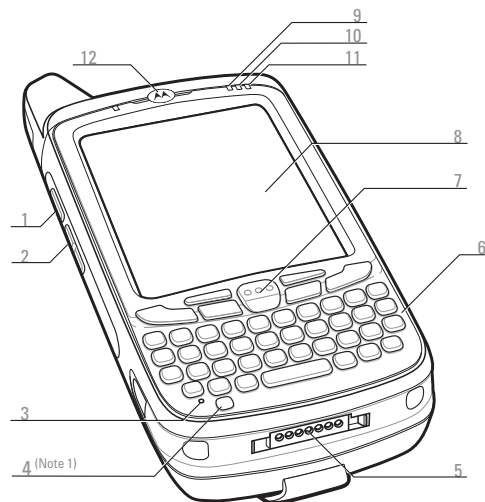

- |                      |  |
|----------------------|--|
| 1 Scan/Action Button | 8 Touch Screen (with screen protector) |
| 2 Up/Down Button     | 9 Data Capture LED                     |
| 3 Microphone         | 10 Charging/Battery Status LED         |
| 4 Power Button       | 11 WAN Radio Status LED                |
| 5 I/O Connector      | 12 Phone Speaker                       |
| 6 Keypad             |  |
| 7 Scan/Action Button |  |

**Note 1:** To reset the MC67, press and hold the Power button until the menu appears and then select **Reset**.

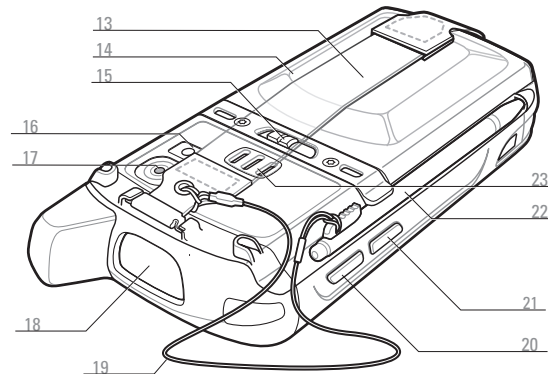

- |   |                       |
|---|-----------------------|
| 13 Handstrap                              | 19 Tether             |
| 14 Battery                                | 20 Scan/Action Button |
| 15 Battery Latch                          | 21 Action Button      |
| 16 Camera Flash                           | 22 Stylus             |
| 17 Camera                                 | 23 Speaker            |
| 18 Exit Window (see Data Capture Options) |                       |

## Notifications

Data Capture LED:


- Green: Good Decode

Radio Status LED:


- Green: RF active

Charging/Battery Status LED:


- Slow blinking amber: Battery charging
- Solid amber: Fully charged
- Fast blinking amber: Charging error

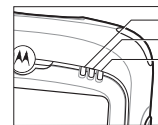

Data Capture  
Charging/Battery Status  
Radio Status

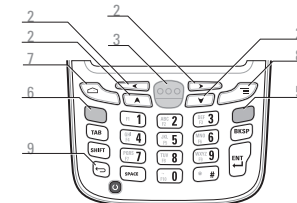

Numeric Keypad

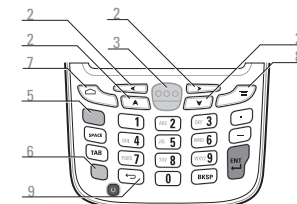

Alpha-Numeric Keypad

## Orange Key

Use this key to access the secondary layer of characters.

- > Press the Orange key once to lock the keypad into Alpha state.
- > Press the Orange key a second time to return to the normal state.

DSD Keypad

## Blue Key

Use this key to access application dependent function keys shown on the keypad in blue.

- > Press the Blue key once to activate this state, followed by another key.

## Orange Key

Use this key to access the secondary layer of characters

- > Press the Orange key once to lock the keypad into Alpha state.
- > Press the Orange key a second time to return to the normal state.

- |                      |
|----------------------|
| 1 Talk               |
| 2 Navigation         |
| 3 Scan/Action Button |
| 4 End                |
| 5 Orange Key         |
| 6 Blue Key           |
| 7 Home               |
| 8 Menu               |
| 9 Back               |

## CARD INSTALLATION

### MicroSD Card Installation (Optional)

1. Remove the handstrap.
2. Lift the rubber access door.
3. Slide the SIM card holder up to unlock.
4. Lift the SIM card holder.
5. Carefully lift the microSD card holder.
6. Insert the microSD card into the card holder.

## NOTE:

Proper position of the microSD card — the card connector (i.e., gold contacts) should be facing out as shown.

7. Gently lower the microSD card holder until it snaps into place.






### SIM Card Installation (Optional)

8. Insert the SIM card into the SIM holder.

## NOTE:


The proper position of the SIM card—the card connector (i.e., gold area) should be facing outward with the beveled corner facing away.

9. Lower the SIM card holder.
10. Slide the SIM card holder down to lock into place.
11. Close the rubber access door.
12. Install the battery.

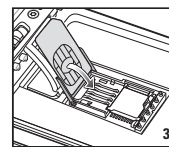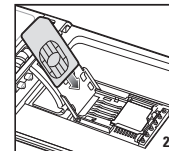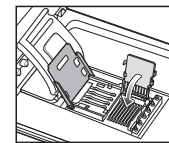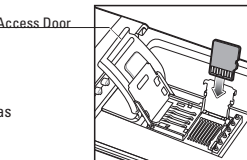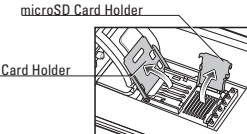

## BATTERY REMOVAL

1. Unlatch the handstrap.
2. Press the Power button until the menu appears.
3. Touch **Battery Swap**.
4. Wait for the red LED to turn off.
5. Slide the battery latch to the right. The battery ejects slightly.
6. Grasp the battery and lift from the MC67.

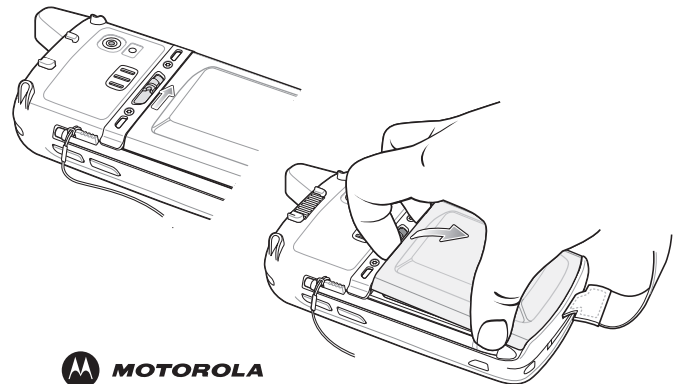

Motorola Solutions, Inc.  
1301 E. Elgonquin Rd. Schaumburg, IL 60196-1078, U.S.A.


MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. Android is a trademark of Google Inc. All other trademarks are the property of their respective owners.  
© 2014 Motorola Solutions, Inc. All rights reserved.



MN000114A01 Rev. B — January 2014

## BATTERY INSTALLATION


1. Insert the battery, bottom first, into the battery compartment.
2. Press down on the battery until the battery latch snaps into place.
3. Replace the handstrap.

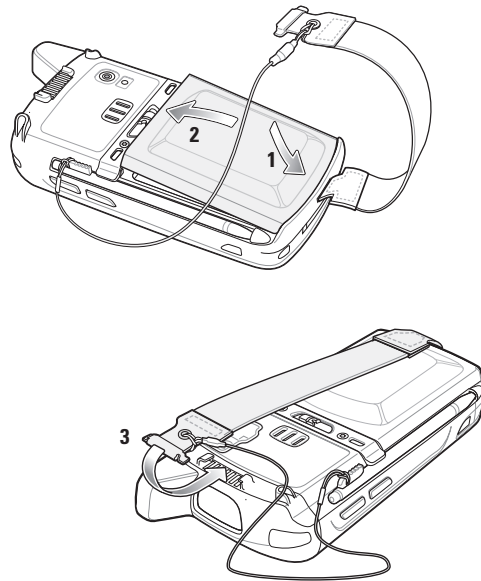


For more information see the MC67 User Guide and the MC67 Integrator Guide available at:  
<http://supportcentral.motorolasolutions.com>


## DATA CAPTURE OPTIONS

### Imaging

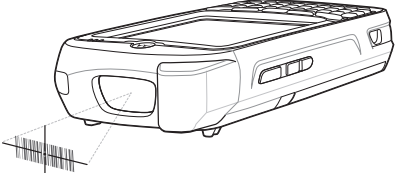- 
1. Ensure that an application is open and a text field is in focus (text cursor in text field).
  2. Point the exit window at the bar code.
  3. Press and hold the **Scan** button.
  4. The red laser aiming pattern turn on to assist in aiming. When the MC67 decodes the bar code the Scan/Decode LED light green and a beep sounds.
  5. Release the **Scan** button.

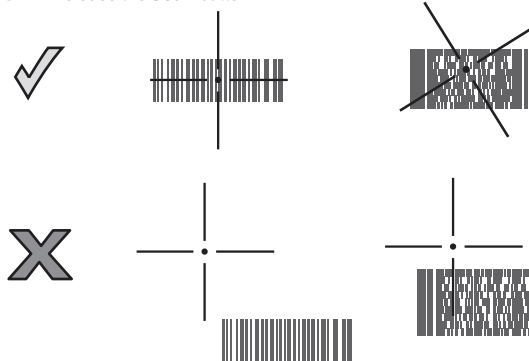

### Camera Decode

- 
1. Ensure that an application is open and a text field is in focus (text cursor in text field).
  2. Point the MC67 at the bar code.
  3. Press the **Scan** button.
  4. In the image window align the red target over the bar code. When the MC67 decodes the bar code the Scan/Decode LED light green and a beep sounds.
  5. Release the **Scan** button.

### Camera Photo

- 
1. Touch  > **Camera**.
  2. Point the MC67 at an object.
  3. Touch the shutter button.

### GPS Information

When using the GPS feature of the MC67:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.
- Without a clear view, acquisition takes much longer and could result in the MC67 being unable to compute the initial position quickly.
- Obtain a satellite fix before moving.
- Shutdown GPS application when not in use.

## AVOID EXTREME WRIST ANGLES

