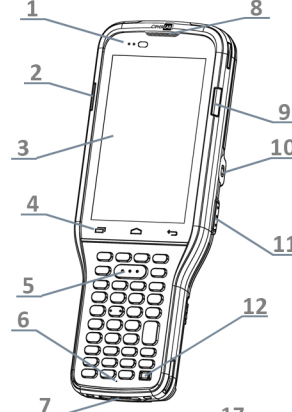
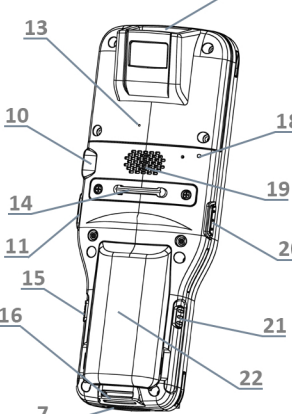
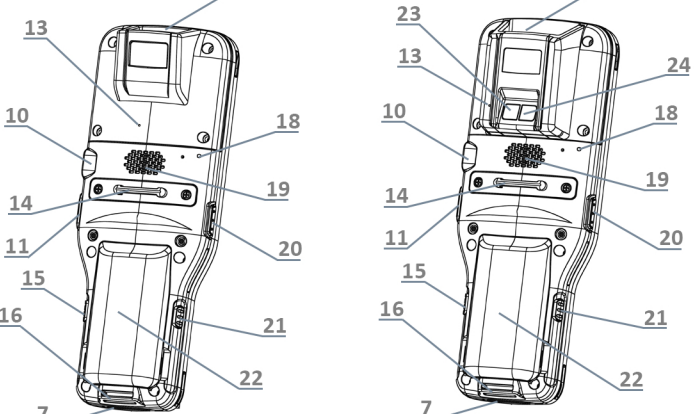


Open Your Box


- ✓ RK95 Mobile Computer
- ✓ Rechargeable Li-ion battery
- ✓ AC Adapter
- ✓ Handstrap
- ✓ Quick Start Guide
- ✓ Snap-on Charging & Communication Cable

Overview


- 
 - Status LED
 - Side LED (Left)
 - Touchscreen
 - Hardware Buttons
 - Scan Key
 - Microphone
 - Charging & Communication Pins
 - Receiver
 - Side LED (Right)
 - Headset Jack
 - Side-Trigger (Right)
 - Power Button
- 
 - Rear Microphone
 - Battery Cover Release Button (Right)
 - Handstrap Hole
 - Back Cover LED
 - Side-Trigger (Left)
 - Battery (with Cover)
 - Camera
- 
 - Handstrap Hole Cover
 - Scan Window
 - Speaker
 - Battery Cover Release Button (Left)
 - Camera Flash

Install / Remove Battery

Install:
The main battery is with the battery cover. To install the battery, please insert the main battery into the battery chamber from the upper end, and then press down the lower edge of the battery.

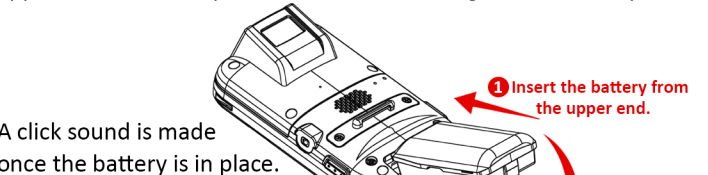


Remove:
Step 1:
Press the release buttons on the two sides of the device at the same time.

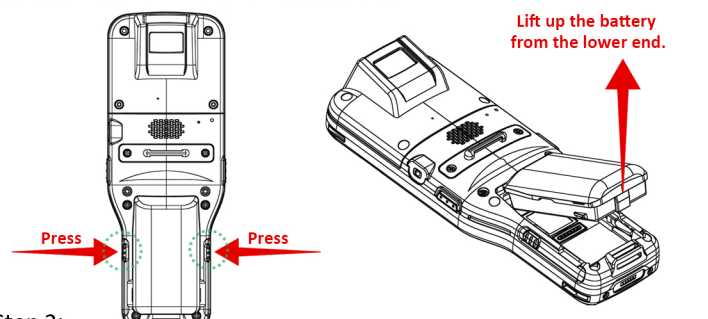


Step 2:
The battery slightly tilts up and it is ready to be removed. By holding the two sides of the battery cover, lift up the main battery (which is with the battery cover) from its lower end to remove it.

Install SD Card

Step 1: Remove the battery (with cover).
Step 2: Insert your fingernail into the notch next to the inner lid that protects the card sockets chamber, and then lift it up.

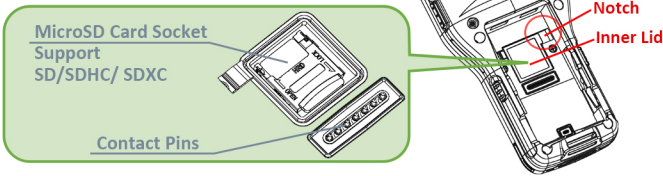

Step 3: After the chamber is revealed, insert the microSD card into the socket. Close and push back the hinged cover till a “click” sounds.

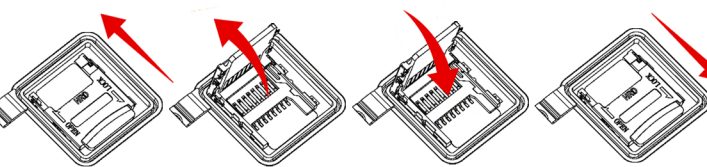

Step 4: Mount the inner lid.
Step 5: Install the battery.

Charging & Communication

Charging and data communication of the RK95 mobile computer can be performed via Snap-on Charging & Communication Cable.

Install:
The pins on the device bottom serve as the sole charging & communication port. Simply hold the snap-on cup toward the bottom of the RK95 mobile computer, and push the snap-on cup upwards to make it to be attached to the device. A “click” sound is made once the snap-on cable is properly connected with the bottom of the device.

Remove:
Holding the RK95 device by one hand while pressing the release buttons and pulling the snap-on cable downwards by the other hand to make the device and the snap-on cup apart.

Important Charging Information

Power Supply	Input: AC 100 - 240V, 47 - 63Hz Output: 4.75V - 5.4V, 2A (Maximum) CipherLab approved
Battery Pack (optional)	3.7V, 3000mAh rechargeable Li-ion battery, CipherLab proprietary 3.7V, 6000mAh rechargeable Li-ion battery, CipherLab proprietary
Charging Time	For 3.7V, 3000mAh battery: Approx. 4 hours via adapter For 3.7V, 6000mAh battery: Approx. 6 hours via adapter


RK95 行動電腦 快速使用指南

繁體中文 簡體中文

檢視包裝內容物／检视包装内容物

- ✓ RK95行動電腦／RK95行动电脑
- ✓ 可充電式鋰電池／可充电式锂电池
- ✓ 電源轉換器／电源适配器
- ✓ 手背帶／手背带
- ✓ 卡扣式充電傳輸線／卡扣式充电传输线
- ✓ 快速使用指南／快速使用指南

概覽／概览

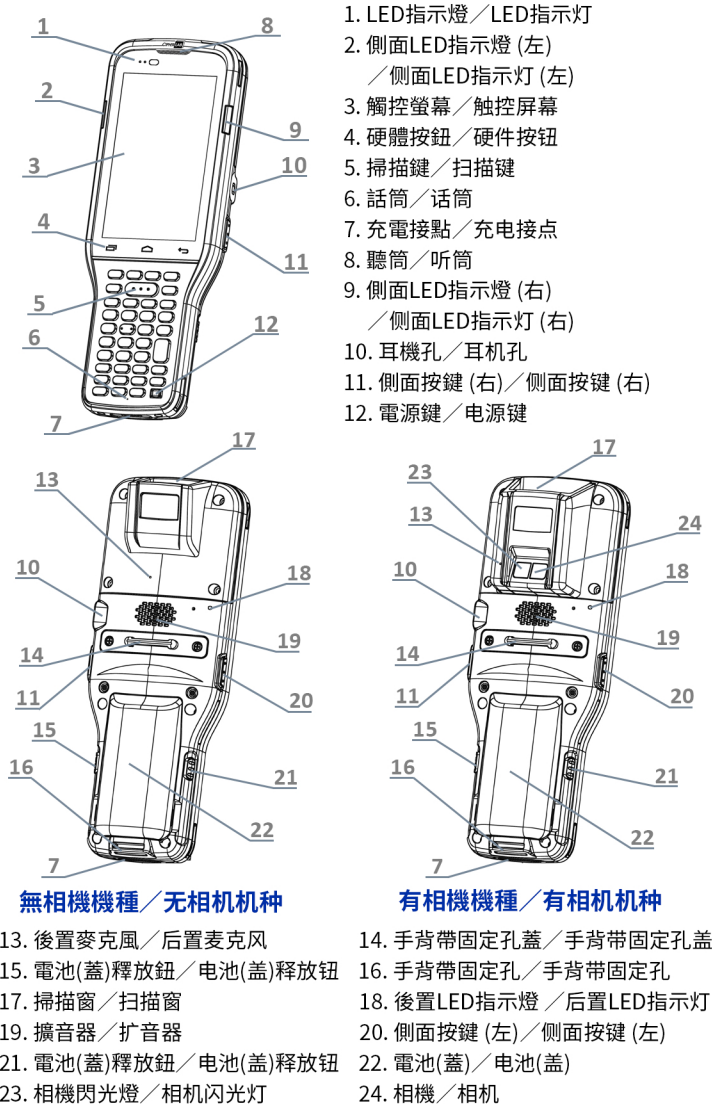

無相機機種／无相机机种

- 13. 後置麥克風／后置麦克风
- 15. 電池(蓋)釋放鈕／电池(盖)释放钮
- 17. 掃描窗／扫描窗
- 19. 擴音器／扩音器
- 21. 電池(蓋)釋放鈕／电池(盖)释放钮
- 23. 相機閃光燈／相机闪光灯

有相機機種／有相机机种

- 14. 手背帶固定孔蓋／手背带固定孔盖
- 16. 手背帶固定孔／手背带固定孔
- 18. 後置LED指示燈／后置LED指示灯
- 20. 側面按鍵(左)／側面按键(左)
- 22. 電池(蓋)／电池(盖)
- 24. 相機／相机


RK95 行动电脑 快速使用指南

繁體中文 簡體中文

電池安裝與拆卸／电池安装与拆卸

安裝主電池／安装主电池：


主電池與電池蓋為一體。安裝主電池請先由電池上端插入電池槽，再下壓底端。主電池與電池蓋為一體。安裝主電池請先由電池上端插入電池槽，再下壓底端。

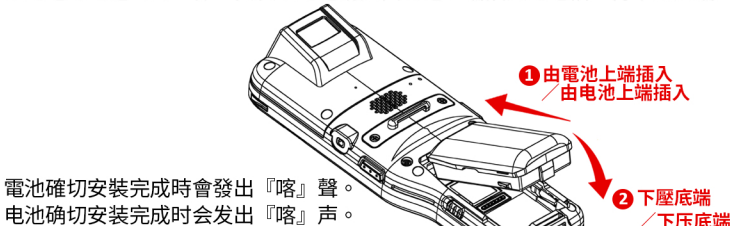

電池確切安裝完成時會發出『喀』聲。電池確切安裝完成时会发出『喀』声。

移除主電池／移除主电池

步驟1：同時按壓住主機左右兩側的電池(蓋)釋放鈕。步驟1：同时按压住主机左右两侧的电池(盖)释放钮。

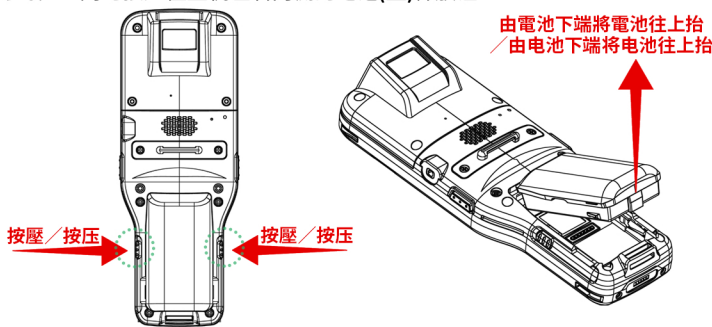


步驟2：電池(蓋)些微向上翹開，即可進行主電池移除。請握住電池蓋左右兩側，由主電池（與電池蓋為一體）下端抬起以移除。步驟2：电池(盖)些微向上翘开，即可进行主电池移除。请握住电池盖左右两侧，由主电池（与电池盖为一体）下端抬起以移除。

安裝SD卡／安装SD卡

步驟1：移除主電池（與電池蓋為一體）

步驟1：移除主电池（与电池盖为一体）

步驟2：以指甲尖端插入卡槽保護內蓋旁的縫隙，略為施力將內蓋向上撬起。步驟2：以指甲尖端插入卡槽保护内盖旁的缝隙，略为施力将内盖向上撬起。

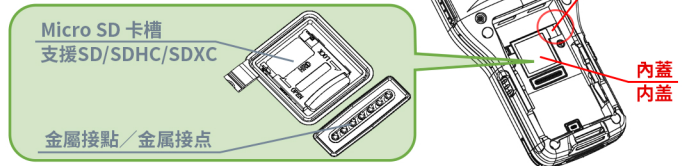


>>

認證資訊請看：
設定 → 系統 → 關於手機 → 法規標籤

繁體中文 簡體中文

步驟3：開啟卡槽後將SD卡插入，蓋上鉸接蓋再前推，發出『喀』聲即為上鎖。步驟3：开启卡槽后将SD卡插入，盖上铰接盖再前推，发出『喀』声即为上锁。

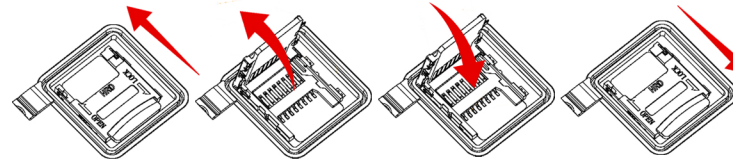

步驟4：蓋上內蓋。／步骤4：盖上内盖。

步驟5：將電池(蓋)裝上。／步骤5：将电池(盖)装上。

充電與傳輸／充电与传输

RK95行動電腦可透過卡扣式傳輸充電線為電池充電，或進行資料傳輸。／RK95行动电脑可透过卡扣式传输充电线为电池充电，或进行数据传输。

安裝／安装：

RK95行動電腦底部的金屬接點可同時支援資料傳輸與充電。將傳輸充電槽對準RK95行動電腦底部，上推傳輸充電槽，使其與RK95主機接合。當傳輸充電槽確切連接上RK95行動電腦底部時，會發出『喀』聲。／RK95行动电脑底部的金属接点可同时支援资料传输与充电。将传输充电槽对准RK95行动电脑底部，上推传输充电槽，使其与RK95主机接合。当传输充电槽确切连接上RK95行动电脑底部时，会发出『喀』声。

移除／移除：

以一手握住RK95主機，而另一手按壓釋放鈕的同時下拉傳輸充電槽，讓主機與傳輸充電線分開。／以一手握住RK95主机，而另一手按压释放钮的同时下拉传输充电槽，让主机与传输充电线分开。

重要電源資訊／重要电源信息

電源轉換器 电源适配器	輸入／输入：AC 100 - 240V, 47 - 63Hz 輸出／输出：4.75V - 5.4V, 2A CipherLab專用電源供應器 CipherLab专用电源适配器
電池容量（可選） 电池容量（可选）	3.7V, 3000mAh, CipherLab 專用充電式鋰電池 3.7V, 3000mAh, CipherLab 专用充电式锂电池 3.7V, 6000mAh, CipherLab 專用充電式鋰電池 3.7V, 6000mAh, CipherLab 专用充电式锂电池
充電時間 充电时间	3.7V, 3000mAh電池：以電源轉換器充電約4小時 3.7V, 3000mAh电池：以电源转换器充电约4小时 3.7V, 6000mAh電池：以電源轉換器充電約6小時 3.7V, 6000mAh电池：以电源转换器充电约6小时