


RK95 Rubber Boot Quick Start Guide


Overview

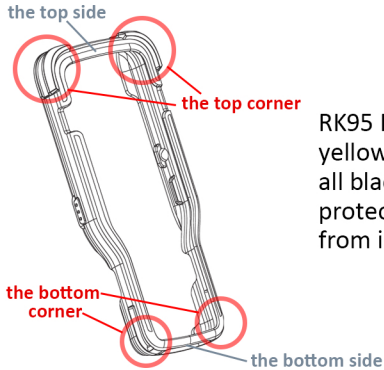

RK95 Rubber Boot, which is with the yellow frame in the front side while it is all black in the back side, is used for protecting the RK95 mobile computer from impact.

Step 3:

Complete shielding RK95 mobile computer by rubber boot.


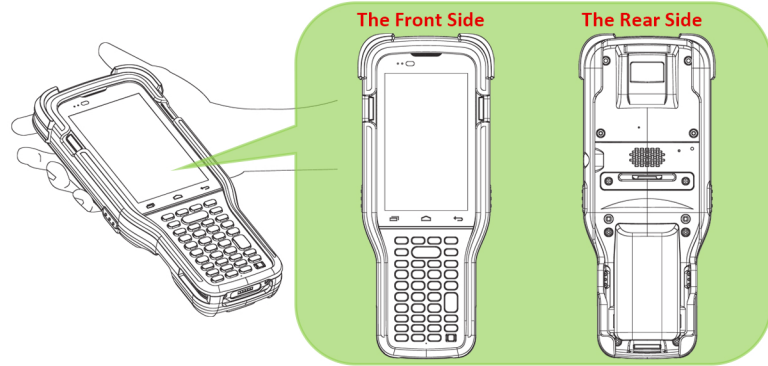


Installation

Step 1: Put the RK95 mobile computer into the back side of the rubber boot from the device upper end.

Step 2:

Cover the bottom end of RK95 mobile computer with the 2 bottom corners.

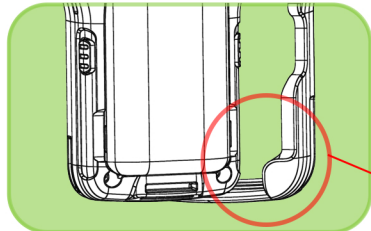
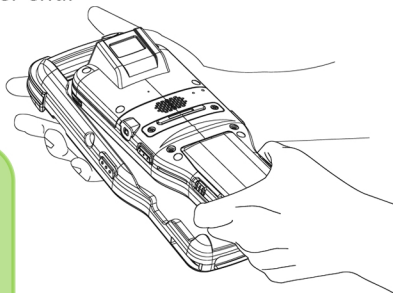


Cover the device bottom corners.

Remove

Peel one of the rubber boot top corners, and then peel another side to take off the rubber boot from the RK95 mobile computer.

Peel the rubber boot top corners.

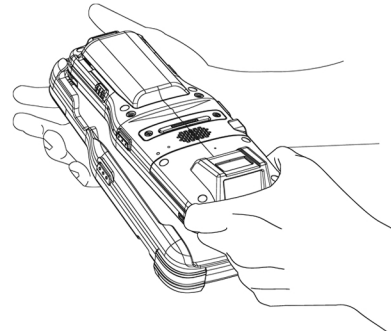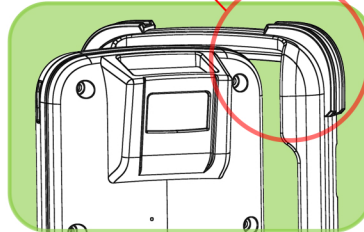

RK95 保護殼 快速開始指南



繁中 簡中

概覽 / 概览

保護殼上端 / 保护壳上端



保護殼左右二上角
保护壳左右二上角

RK95 保護殼用於保護RK95行動電腦
避免碰撞。其正面有黃色邊框，而
背面則為全黑色。

RK95 保护壳用于保护RK95行动电脑
避免碰撞。其正面有黄色边框，而
背面则为全黑色。

保護殼左右二下角
保护壳左右二下角



保護殼底端 / 保护壳底端


安裝保護殼 / 安装保护壳

步驟1：將RK95行動電腦主機上端，從保護殼的背面對準放置入。


步驟1：将RK95行动电脑主机上端，从保护壳的背面对准放置入。

步驟2：以保護套的左右二下角
包覆住RK95主機的
下端。

步驟2：以保护套的左右二下角
包覆住RK95主机的
下端。

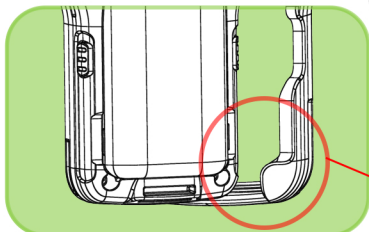

包覆主機的下端 / 包覆主机的下端

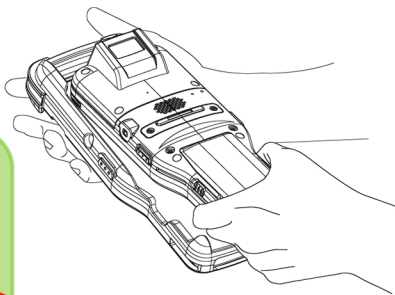


RK95 保护壳 快速开始指南



繁中 簡中

步驟3： RK95主機放置入保護殼內完成。

步骤3： RK95主机放置入保护壳内完成。

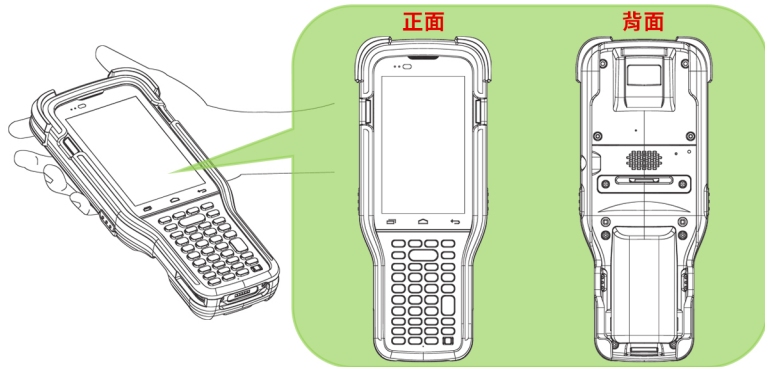

移除保護殼 / 移除保护壳

剝開保護殼的任一上角，再剝開另一上角。將保護殼與RK95主機分開。

剥开保护壳的任一上角，再剥开另一上角。将保护壳与RK95主机分开。

將保護殼的左右二上角剝開
/ 将保护壳的左右二上角剥开

