 
080223XT40

Technology at Work.®



MANAL

Post of Line

XT40 SeriesTM

Quick Start Guide

Battery Warning

CAUTION

IF MISUSED OR MISTREATED THE BATTERY MAY PRESENT A RISK OF FIRE OR CHEMICAL BURN.
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

BATTERY SAFETY GUIDELINES.

Use only Janam XT40 Series batteries and recharge batteries using only Janam approved charging accessories. Observe the following guidelines for safe use of Li-Ion batteries:

- 1. Do not expose the battery to excessive heat or cold. Do not short-circuit. Do not incinerate.
- 2. To avoid risk of fire, burn or damage to your battery, do not allow a metal object to touch battery contacts.
- 3. Do not disassemble the battery. There are no user serviceable parts inside.
- 4. If battery leakage is observed, avoid any contact with affected area and properly dispose of the battery.
- If you come in contact with battery leakage, rinse exposed area with soap and water. If it contacts the eye, flush the eye with water for 15 minutes and seek medical attention.
- 6. Dispose of used battery promptly. Keep away from children. Do not disassemble or dispose of in fire.
- When discarding a battery, contact your local waste disposal provider to understand local restrictions for disposal or recycling of batteries.

BATTERY CHARGER SAFETY GUIDELINES.

- 1. Do not use the equipment in or near areas in which sparks are likely or possible.
- 2. Do not let equipment's metal contacts and electrical sockets come in contact with metal objects.
- 3. For indoor use only. Do not expose the equipment to rain or any liquids.
- 4. Do not use or store the equipment in direct sunlight or in areas that are prone to get hot such as in a parked vehicle, near a heat duct or close to other heat sources.
- Keep equipment's metal contacts and electrical sockets free from debris that could obstruct charging or could cause a short circuit.

Page 7 Page 2 XT40 Series Quick Start Guide

XT40 Series Quick Start Guide

Copyright 2023 Janam Technologies (part of HID). All rights reserved.

XT40 Series, Janam and the Janam logo are trademarks of Janam Technologies (part of HID). Other product and brand names may be trademarks or registered trademarks of their respective owners.

Janam Technologies assumes no responsibility for any damage or loss resulting from the use of this guide.

Janam Technologies assumes no responsibility for any loss or claims by third parties which may arise through the use of this product. Janam Technologies assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery or repairs. To protect against data loss, be sure to make backup copies (on other media) of all important data.

Follow all usage, charging and maintenance guidelines in the Product User Guide. If you have questions, contact Janam. For a copy of the Product User Guide, visit www.janam.com.

Important: Please read the End User License Agreement for this product before using the device or the accompanying software program(s). Using the device or any part of the software indicates that you accept the terms of the End User License Agreement.

Page 1 Janam Technologies

Content and Additional Resources

To help you get started with your XT40 Series mobile computer, this guide features:


- Hardware Overview
- Getting Started
 - A. Install the Battery
 - B. Charge the Battery
 - C. Remove the Battery + Access MicroSD and SIM Card Slots
- Battery warnings and safety guidelines.

Contents of this guide are subject to change. For the most current version of this guide and additional product details, visit www.janam.com.

For software updates and information, visit www.janam.com/product-zone.

Hardware Overview

- Barcode Scanner
- 2. Camera
- 3.5mm Audio Jack
- 4. Touch Screen
- Right Trigger
- 6. Power Key
- **USB-C Connector**
- Pogo Pin Connector
- Volume Key
- 10. Left Trigger

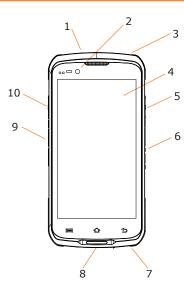

Page 3

3.

Getting Started

A. INSTALLING THE BATTERY

- 1. To access the battery compartment, remove the handstrap by pulling down the plastic clip located on the bottom of the XT40. Move both tabs on the battery cover to the "unlock" position and pull the cover away from the device.
- 2. Position the battery so that the text "Insert this direction." is on the left side and snap into place. Replace the battery cover by positioning the bottom prongs first and snapping cover into place.
- 4. Move both tabs on the battery cover to the "lock" position.

B. CHARGING THE BATTERY

Important Note: The main battery charges the backup battery in the XT40 Series device. When discharged, the backup battery requires approx. 1.5 hours to recharge.


To charge the battery using the included AC/DC Power Adapter Kit:

- 1. Connect the AC/DC adaptor to XT40 Series.
- 2. Plug in the AC/DC Adapter. Use only easily accessible wall sockets that are easily reached with the length of supplied power

To charge the battery using a Cradle Kit:

- 1. Connect the power supply to the cradle, then connect the line cord to the power supply.
- Plug in the power supply. Use only easily accessible wall sockets that are easily reached with the length of supplied power cable.
 Place the device in cradle. The LED on the device will illuminate to confirm connection.
- 4. The battery is fully charged in approximately 2.5 hours.
- 5. To charge a battery in the spare battery well, insert the battery into the well top down (connectors on the battery should face downward and to the back of the cradle) and gently press down. The LED light on the cradle will illuminate to confirm connection.

Hardware Overview

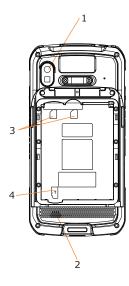

- Camera
- Speaker
- SIM Card Slot
- MicroSD Card Slot

Page 4 Janam Technologies

Getting Started (continued)

To charge the Backup Battery:

- 1. Navigate to the Home Screen -> App drawer -> Settings -> Battery.
- 2. Select "Backup Battery Charge" option.

C. ACCESSING SIM CARD SLOT and MICROSD CARD SLOT

- 1. Remove the back cover.
- 2. Remove battery from the XT40.
- 3. MicroSD card slots and SIM slot are now accessible. Insert the MicroSD or SIM with gold-colored contacts facing downward.
- 4. Replace the battery.
- 5. Replace the battery cover.