

# Integrated RFID Table



## Installation Guide



**ZEBRA**

## Copyright

© 2022 ZIH Corp. and/or its affiliates. All rights reserved. ZEBRA and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

**COPYRIGHTS & TRADEMARKS:** For complete copyright and trademark information, go to: [www.zebra.com/copyright](http://www.zebra.com/copyright)

**WARRANTY:** For complete warranty information, go to: [www.zebra.com/warranty](http://www.zebra.com/warranty)

**END USER LICENSE AGREEMENT:** For complete EULA information, go to: [www.zebra.com/eula](http://www.zebra.com/eula)

## Terms of Use

**Proprietary Statement** This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries (“Zebra Technologies”). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

**Product Improvements** Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

**Liability Disclaimer** Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

**Limitation of Liability** In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

# Contents

- Introduction..... 1**
- Installation..... 2**
- Operation..... 3**
  - Moving the Table..... 3
  - Adjusting the Table Height ..... 3
- Cleanup ..... 4**

# Introduction

RFID antennas mounted underneath the table are specially configured to read items placed on the surface in any orientation. Specialized antennas provide superior performance for fast, accurate, confident reads in multiple orientations across the table surface.

This document describes how to perform a typical installation of the Zebra Table RFID Portal.


# Installation

This installation should only be performed by a professional technician trained to install this hardware.

Read these instructions thoroughly before performing the installation.

The Zebra RFID Table Portal is attached to the pallet upside down. The table weighs approximately 100 pounds and requires no less than two persons to set upright. Take all necessary safety precautions.

1. Remove the table from its packaging.
2. Turn the table to its upright position.
3. Move the table to the desired location.
4. Connect Power over Ethernet (PoE) cable.

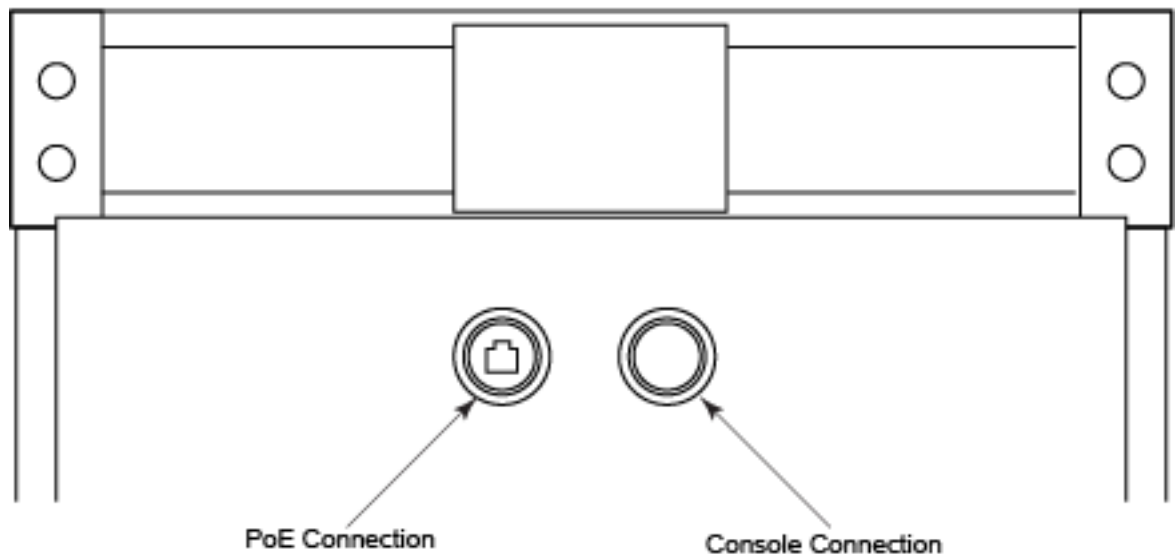

UNDERSIDE OF TABLE

# Operation

The Zebra RFID Table Portal is operational when the Power over Ethernet (PoE) cable is connected.

## Moving the Table

1. Unlock the casters (if locked)
2. Roll the table to the desired location.
3. Lock the casters.

## Adjusting the Table Height

4. Rotate the adjustment crank clockwise to raise the table height.
5. Rotate the adjustment crank counterclockwise to lower the table height.



# Cleanup

Make sure to remove any packing material, packing ties, tools, and other equipment from the installation.

Make sure to clean up any dust or debris created by the installation.

