


# RK95 Snap-on Charging and Comm. Cable Quick Start Guide

The Snap-on Cable allows convenient charging and data transmission of the RK95 mobile computer. Please refer to the RK95 reference manual for more details on using the RK95 mobile computer.

## Overview

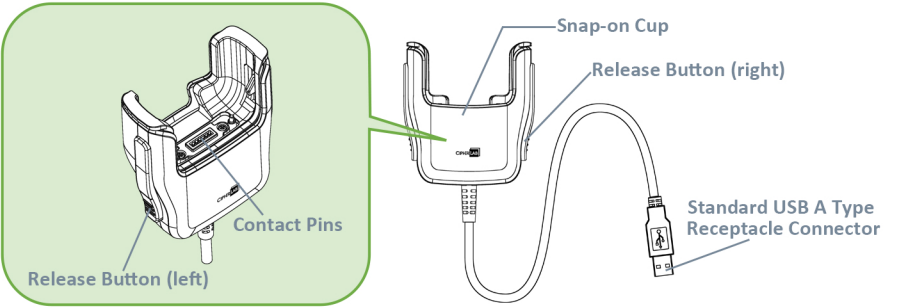


## Important Charging Information

|                         |                                                                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Power Supply            | Input: AC 100 - 240V, 47 - 63Hz; output: 4.75V - 5.4V, 2A (Maximum)<br>CipherLab approved                                            |
| Battery Pack (optional) | 3.7V, 3000mAh rechargeable Li-ion battery, CipherLab proprietary<br>3.7V, 6000mAh rechargeable Li-ion battery, CipherLab proprietary |
| Charging Time           | For 3.7V, 3000mAh battery: Approx. 4 hours via adapter<br>For 3.7V, 6000mAh battery: Approx. 6 hours via adapter                     |

## Install & Remove Internal Cup


**Remove:**  
The internal cup must be removed if the device is equipped with the rubber boot.  
1) Press the two top edges inwards.  
2) Take off the internal cup.

**Install:**  
1) Push the internal cup into the snap-on cup.  
2) Push the two edges outwards to make the internal cup fasten to the snap-on cup till a “click” sound is made.

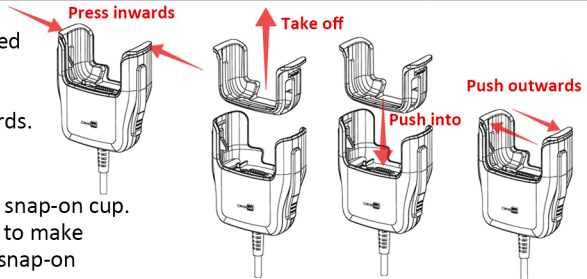

## Installation & Remove

**Installation:**  
Simply hold the snap-on cup toward the bottom of the RK95 mobile computer, and push the snap-on cup upwards to make it to be attached to the device. A “click” sound is made once the snap-on cable is connected with the bottom of the device in place.

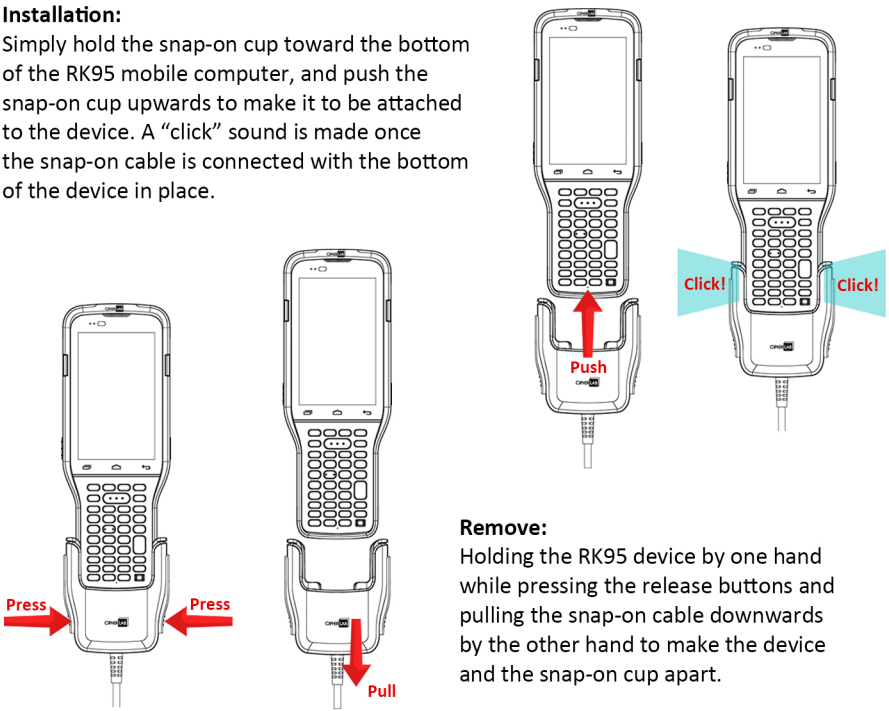

**Remove:**  
Holding the RK95 device by one hand while pressing the release buttons and pulling the snap-on cable downwards by the other hand to make the device and the snap-on cup apart.

## LED Indicator on the RK95 Mobile Computer

While the device battery is being charged via the Snap-on cable, the LED on the upper right side of the mobile computer screen will indicate the charging status:


| LED Indicator | Status       | Description                          |
|---------------|--------------|--------------------------------------|
| Charging      | Red, solid   | Charging the mobile computer         |
|               | Red, blink   | Charging error                       |
|               | Green, solid | Charging complete                    |
|               | No light     | The cable is not correctly connected |

# RK95 卡扣式傳輸充電線 快速開始指南

繁中 簡中

卡扣式充電傳輸線可用於進行RK95行動電腦的充電及資料傳輸，而關於RK95行動電腦的使用方式，請參考行動電腦的操作手冊。  
卡扣式充電傳輸線可用於進行RK95行動電腦的充電及資料傳輸，而關於RK95行動電腦的使用方式，請參考行動電腦的操作手冊。

## 概覽／概覽

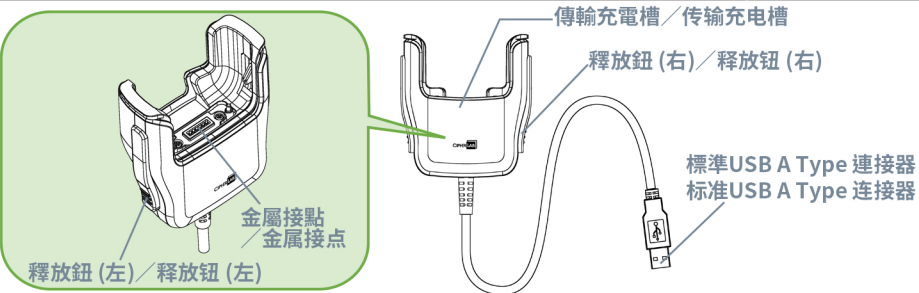

## 重要電源資訊／重要电源信息

|                      |                                                                                                                              |
|----------------------|------------------------------------------------------------------------------------------------------------------------------|
| 電源轉換器<br>电源适配器       | 輸入／输入：AC 100 - 240V, 47 - 63Hz；輸出／输出：4.75V - 5.4V, 2A<br>CipherLab專用電源供應器／CipherLab 专用电源适配器                                  |
| 電池容量（可選）<br>电池容量（可选） | 3.7V, 3000mAh、3.7V, 6000mAh<br>CipherLab 專用充電式鋰電池／CipherLab 专用充电式锂电池                                                         |
| 充電時間<br>充电时间         | 3.7V, 3000mAh電池：以電源轉換器充電約4小時<br>3.7V, 3000mAh電池：以电源转换器充电约4小时<br>3.7V, 6000mAh電池：以電源轉換器充電約6小時<br>3.7V, 6000mAh電池：以电源转换器充电约6小时 |


## 內襯座的安裝與移除／内衬座的安装与移除

**移除／移除：**若主機已裝上保護殼，需先將卡扣式傳輸充電座的內襯座取出。  
／若主机已装上保护壳，需先将卡扣式传输充电座的内衬座取出。

- 1) 將左右兩側邊頂端朝內壓。／將左右两侧边顶端朝内压。
- 2) 取出內襯座。／取出内衬座。

**安裝內襯座／安装内衬座：**

- 1) 將內襯座推入卡扣式傳輸充電座。  
／將内衬座推入卡扣式传输充电座。
- 2) 外推內襯座左右兩側邊至『喀』聲響，使其與卡扣式傳輸充電座密合。  
／外推内衬座左右两侧边至『喀』声响，使其与卡扣式传输充电座密合。

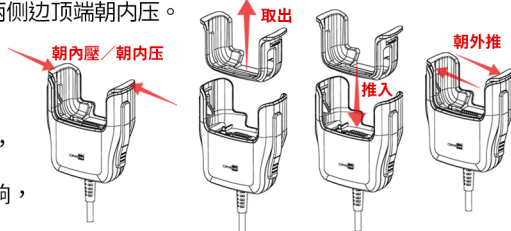

# > RK95 卡扣式传输充电线 快速开始指南



>>

繁中 簡中

## 安裝與移除／安装与移除

**安裝／安装：**

將傳輸充電槽對準RK95行動電腦底部，上推傳輸充電槽，使其與RK95主機接合。當傳輸充電槽確切連接卡上 RK95行動電腦底部時，會發出『喀』聲。  
／将传输充电槽对准RK95行动电脑底部，上推传输充电槽，使其与RK95主机接合。当传输充电槽确切连接卡上 RK95行动电脑底部时，会发出『喀』声。

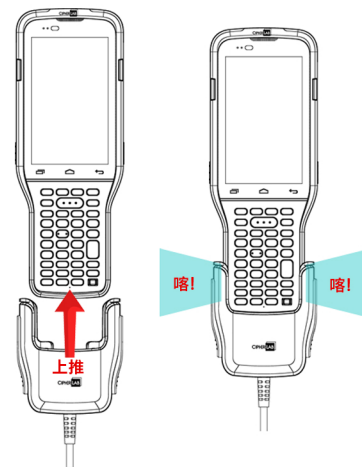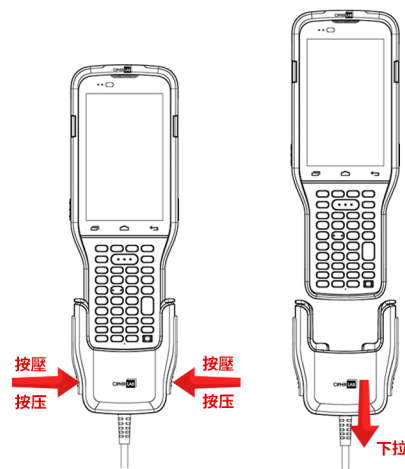

**移除／移除：**

以一手握住RK95主機，而另一手按壓釋放鈕的同時下拉傳輸充電槽，讓主機與傳輸充電線分開。  
／以一手握住RK95主机，而另一手按压释放钮的同时下拉传输充电槽，让主机与传输充电线分开。

## 主機上的LED指示燈號／主机上的LED指示灯号

行動電腦主電池充電時，螢幕右上方的LED充電狀態指示燈將亮起，顯示充電狀態：  
行动电脑主电池充电时，螢幕右上方的LED充电状态指示灯将亮起，显示充电状态：

| LED 指示燈<br>LED 指示灯 | 狀態／状态     | 說明／说明                                        |
|--------------------|-----------|----------------------------------------------|
| 充電／充电              | 紅燈恆亮／红灯恒亮 | 行動電腦充電中／行动电脑充电中                              |
|                    | 紅燈閃爍／红灯闪烁 | 充電錯誤（充電將會停止）／充电错误（充电将会停止）                    |
|                    | 綠燈恆亮／绿色恒亮 | 充電完成／充电完成                                    |
|                    | 沒有燈亮／没有灯亮 | 無法充電（充電線端未正確連接主機或插座）<br>无法充电（充电线端未正确连接主机或插座） |