


RS35 Snap-on Charging and Comm. Cable Quick Start Guide

>
EN

>>
EN

RS35 Snap-on Charging & Communication Cable allows convenient charging and data transmission of the RS35 mobile computer. Please refer to the RS35 Mobile Computer Reference Manual for more details on how to use the device.

Overview

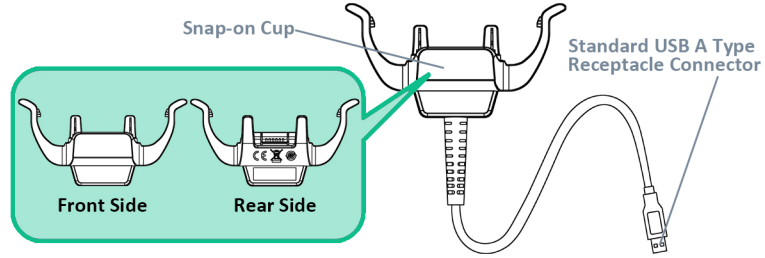

Important Charging Information



Power Supply	Input: AC 100 - 240V, 47 - 63Hz Output: 4.75V - 5.4V, 2A CipherLab approved
Battery Pack	3.85V, 4000mAh rechargeable Li-Polymer battery, CipherLab proprietary
Charging Time	Approx. 4 hours via adapter

Installation

Warning: The USB Type-C cable must be removed from the RS35 device before installing the snap-on cable.


Step 1: Hold the snap-on cup toward the bottom of the RS35 mobile computer, and place one of the snap-on cup side to the side of the RS35 mobile computer.

Step 2: Push the snap-on cup upwards to make its another side to be attached to the RS35 mobile computer.

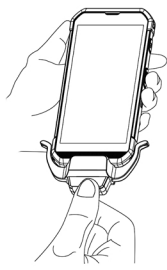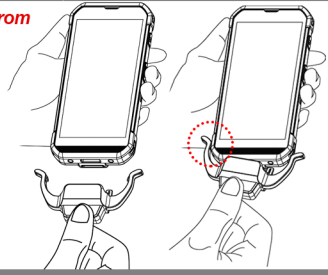

Step 3:
A "click" sound is made once the snap-on cable is connected with the bottom of the RS35 mobile computer in place.


Step 4:
Connect the USB plug to the approved adapter for external power connection, or plug it to the USB port of PC or laptop for data transmission and charging.

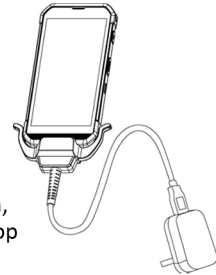

Remove

Step 1: Pull aside one side of the snap-on cup to make it part with the side of the RS35 mobile computer.

Step 2:
Pull down the snap-on cable and pull up the RS35 mobile computer at the same time.

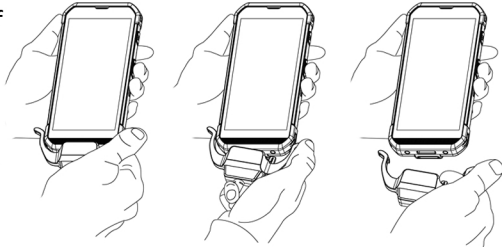

LED Indicator on the RS35 Mobile Computer

While the device battery is being charged via the Snap-on cable, the LED on the mobile computer will indicate charging status:


LED Indicator	Status	Description
Charging	Red, solid	Charging the mobile computer
	Red, blink	Charging error
	Green, solid	Charging complete
	No light	The cable is not correctly connected

RS35 卡扣式傳輸充電線 快速開始指南

繁中 簡中

卡扣式充電傳輸線可用於進行RS35行動電腦的充電及資料傳輸，而關於RS35行動電腦的使用方式，請參考行動電腦的操作手冊。
卡扣式充电传输线可用于进行RS35行动电脑的充电及资料传输，而关于RS35行动电脑的使用方式，请参考行动电脑的操作手册。

概覽 / 概览

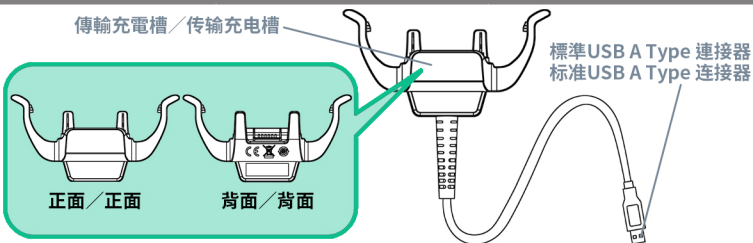

重要電源資訊 / 重要电源信息

電源轉換器 电源转换器	輸入 / 输入：AC 100 - 240V, 47 - 63Hz 輸出 / 输出：4.75V - 5.4V, 2A CipherLab 專用電源供應器 / CipherLab 专用电源供应器
電池容量 / 电池容量	3.85V, 4000mAh , CipherLab 專用充電式鋰聚合物電池 3.85V, 4000mAh , CipherLab 专用充电式锂聚合物电池
充電時間 / 充电时间	以電源轉換器充電約4小時 / 以电源适配器充电约4小时

安裝 / 安装


警告：請務必先移除連接於RS35主機上的USB Type-C線，再安裝卡扣式傳輸充電線。
警告：请务必先移除连接于RS35主机上的USB Type-C线，再安装卡扣式传输充电线。

步驟1 / 步骤1：

將傳輸充電槽對準RS35行動電腦底部，並將傳輸充電槽其一側邊與RS35行動電腦的側邊接合。將傳輸充電槽對準RS35行動電腦底部，並將傳輸充電槽其一側邊與RS35行動電腦的側邊接合。

步驟2 / 步骤2：


上推傳輸充電槽，使其另一側邊與RS35主機接合。上推传输充电槽，使其另一侧边与RS35主机接合。

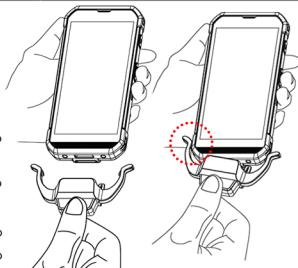

>


RS35 卡扣式传输充电线 快速开始指南

繁中 簡中

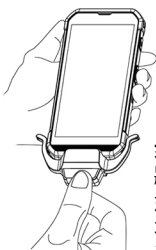

步驟3 / 步骤3：

當傳輸充電槽確切連接卡上RS35行動電腦底部時，會發出『喀』聲。
当传输充电槽确切连接卡上RS35行动电脑底部时，会发出『喀』声。

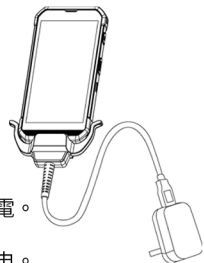

步驟4 / 步骤4：

將USB插頭接上電源轉換器，進行外部電源連接；或插入電腦的USB埠進行資料傳輸 / 充電。
将USB插头接上电源转换器，进行外部电源连接；或插入电脑的USB埠进行文件传输 / 充电。


卸除 / 卸除

步驟1 / 步骤1：

將傳輸充電槽的任一側邊向外拉開，使其與RS35主機側邊分開。將传输充电槽的任一侧边向外拉开，使其与RS35主机侧边分开。

步驟2 / 步骤2：

下拉傳輸充電槽，同時將RS35主機上移取出。
下拉传输充电槽，同时将RS35主机上移取出。

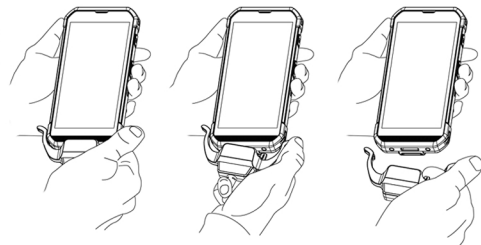

LED 指示燈號 / LED 指示灯号

行動電腦主電池充電時，螢幕上方的LED充電狀態指示燈將亮起，顯示充電狀態：
行动电脑主电池充电时，螢幕上方的LED充电状态指示灯将亮起，显示充电状态：

LED 指示燈 LED 指示灯	狀態 / 状态	說明 / 说明
充電 / 充电	紅燈恆亮 / 红灯恒亮	行動電腦充電中 / 行动电脑充电中
	紅燈閃爍 / 红灯闪烁	充電錯誤 (充電將會停止) 充电错误 (充电将会停止)
	綠燈恆亮 / 绿色恒亮	充電完成 / 充电完成
	沒有燈亮 / 没有灯亮	無法充電 (充電線端未正確連接本機或插座) 无法充电 (充电线端未正确连接本机或插座)