


PROTECTIVE RUBBER BOOT INSTALLATION GUIDE




Installation

1

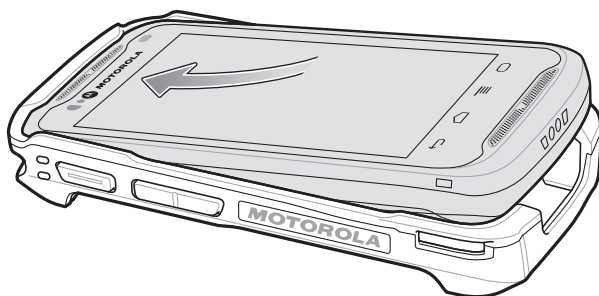


2

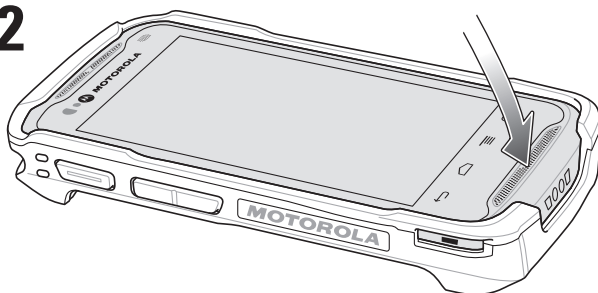


Removal

1

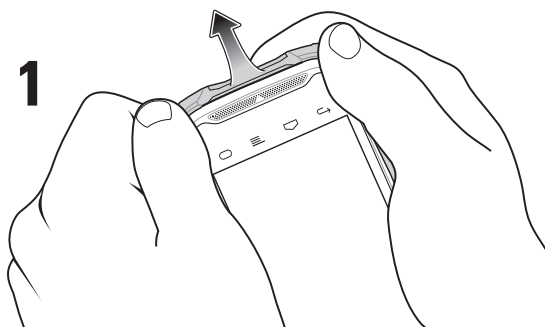


2

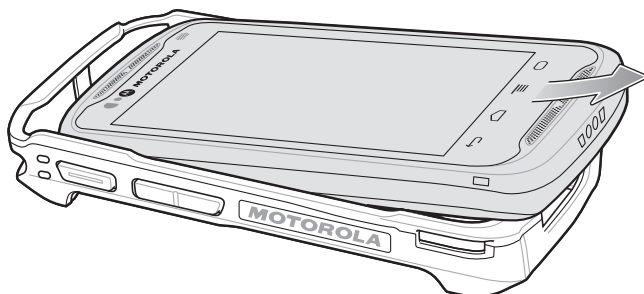


Stylus Installation


1

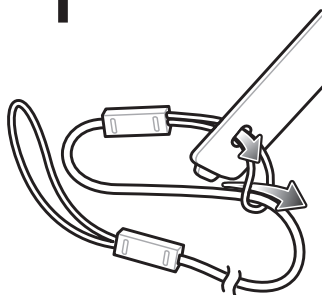


2

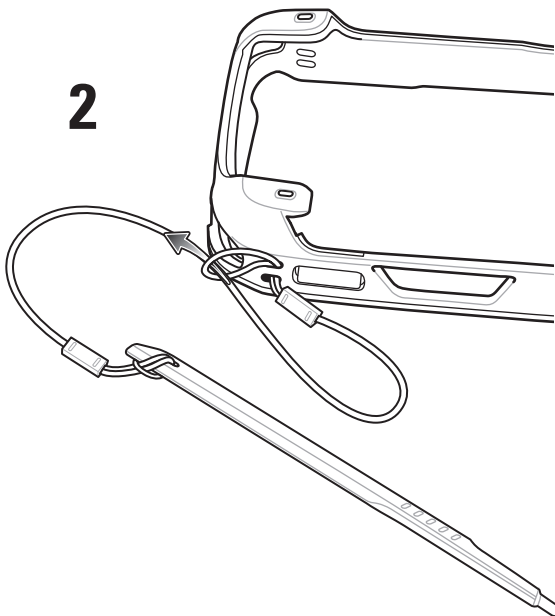

3

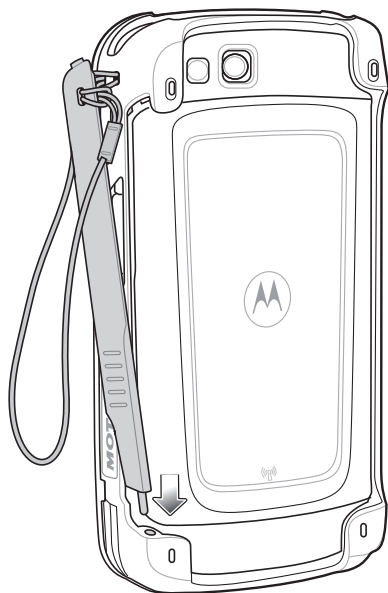

4

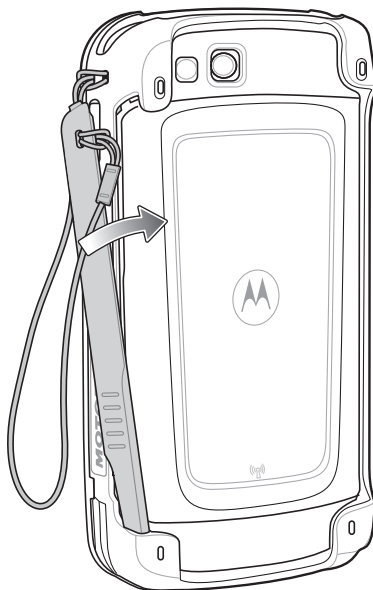

MOTOROLA

Motorola Solutions, Inc.

1301 E. Algonquin Rd. Schaumburg, IL 60196-1078, U.S.A

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

© 2013 Motorola Solutions, Inc. All Rights Reserved.



MN000119A01 Rev. A - August 2013

